

A large, light pink outline of a lampshade, which is wider at the top and tapers down to a circular base. The outline is centered on the page.

× × × × ×

SNACKLIGHT

MANUAL

× × × × ×



USER MANUAL

FATBOY® SNACKLIGHT

Product information

The Fatboy Snacklight is perfect for creating a dash of atmosphere when serving drinks and snacks. The light source for the Snacklight is a single LED module and has an adjustable luminous intensity. With the integrated magnets the lamp can be affixed on the metal tray. The lamp is protected from dripping water and comes equipped with a Micro-USB charging connection. The adapter provided is suitable for 100 to 240 VAC power supplies (50/60Hz). A fully charged lamp will remain lit for approximately 6.5 hours (at 100% brightness).

INSTRUCTIONS FOR USE AND MAINTENANCE

- Place the tray on a dry, horizontal surface.
- Do not expose the lamp to excessive heat from heat sources.
- The lamp is for indoor use only.
- Check the voltage of your power supply. The voltage must be between 100 and 240 Volt AC.
- Inspect the cable on the Micro-USB adapter provided for damage.
- **Do not use the lamp if the cable is damaged. Please contact your Fatboy dealer if you have any problems.**
- Insert the Micro-USB plug on the adapter into the Micro-USB slot on the bottom of the lamp. Plug the adapter into the wall socket. It will take approximately 3 hours to fully charge the lamp. We recommend charging the battery for 8 hours if you are charging it for the first time. There is an indicator light located next to the

Micro-USB slot. While the battery is charging, the red light will flash, and remains lit when the battery is fully charged.

- We recommend to only use the adapter supplied with the lamp. Push the button at bottom of lamp to turn it on. The brightness is adjustable, and has three settings: Starting position: the lamp is off; Push once: the lamp lights up at 15% brightness; Push second time: the lamp lights up at 50% brightness; Push third time: the lamp lights up at 100% brightness; Push fourth time: the lamp is switched off again.
- Charge the lamp when it stops lighting up.

Warning! Never try to replace the battery yourself. **If the battery will not charge any more, please contact your Fatboy dealer.**

Cleaning

- Clean carefully with soft cloth and lukewarm water (if necessary with soft soap).
- Do not use cleaning agents containing alcohol, ammonia, benzene or abrasive substances. Never open the lamp whilst cleaning it.

TROUBLE SHOOTING

The lamp has fallen and the shade has come loose.

- Replace the shade on the lamp. There is a small marking at the edge to align the parts. If you hear a 'click' sound, the shade has been mounted correctly.

- Please contact your Fatboy dealer if the problem persists.

The lamp does not work.

- Check the connection with the adapter.
- Please contact your Fatboy dealer if the problem persists.

The lamp has fallen and is damaged:

If the lamp no longer works please contact your Fatboy dealer.

Warning! Never open the lamp or the adapter and never attempt to repair the lamp yourself.

Important! Please contact Fatboy or your Fatboy dealer if your problem has not been solved or you have any other problems.

TECHNICAL SPECIFICATIONS

Model: Snacklight

Primary rating (adapter): 100-240 VAC,
50/60 Hz

Secondary rating (charging): 5 VDC, 500 mA

Safety Class: Class III

Connection: Micro-USB, Type B

Light source: 1 x Cree® Xlamp MX-3 LED (1W)

Switch: Built-in with dimmer (3 dimmer positions)

IP value: 21 (protected from dripping water)

Ambient temperature: -10 to 40°C

Materials: Polypropylene (lamp shade), metal (tray)

Internal battery: Li-PO 1500 mA

Dimensions lamp: 13.5 cm (diameter) x 18.5 cm (h)

Weight lamp: 0.33 kg (incl. adapter)

Dimensions metal tray: 55 cm (diameter) x 3 cm (h)

Weight metal tray: 1.8 kg

CE-DIRECTIVE



This product complies with the requirements and other relevant provisions of the current European RoHS and CE Directives 2011/65/EC, 2004/108/EC, 2006/95/EC.

WEEE-INSTRUCTIONS



This product is subject to the provisions of the WEEE Directive 2002/96/EC. Do not dispose of this product together with regular household waste. Consult your local waste disposal authorities for information on collection points for electrical and electronic waste products.

WARRANTY INFORMATION

Visit our website
www.fatboy.com/warranty for information
on warranty on your product.

Fatboy cannot accept any claim on warranty in
event of:

Damage or defects caused by use, operation or
treatment of the product in ways that are incon-
sistent with normal personal or domestic use; repairs
or attempts to repair undertaken by any party other
than Fatboy the original B.V.

**THIS MANUAL IN OTHER LANGUAGES?
GO TO WWW.FATBOY.COM**

QUESTIONS OR PROBLEMS?

Please contact your
Fatboy® dealer or
Fatboy in the event
you have any questions
or problems.

Fatboy the Original B.V.
De Steenbok 19-21
5215 MG Den Bosch
Netherlands
T: + 31 (0) 73 615 4200
E: service@fatboy.com
W: www.fatboy.com



**FROM
SNACKAHOLICS
TO VEGGIEFREAKS**