



Design House *Stockholm*

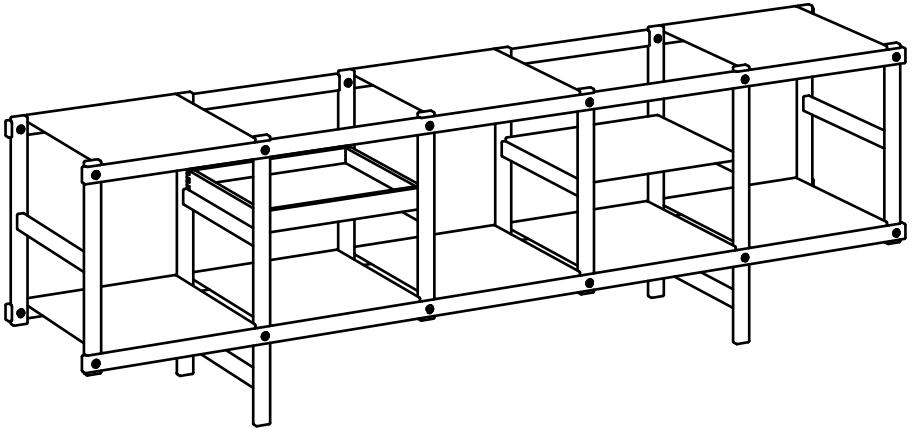


Assembly Instructions
Frame Low (2738-8401)



Components (Hardware & Tools):

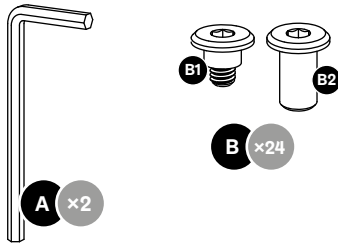



Wall Mounting Kit:

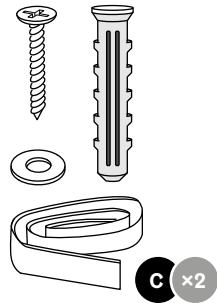


Components:

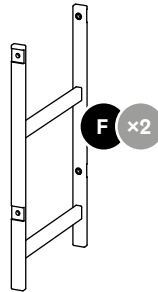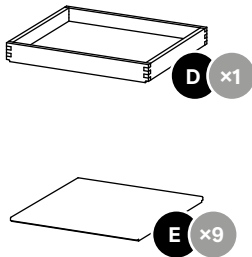


Tools needed:

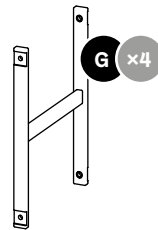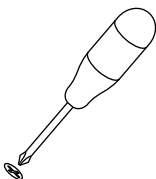


Step 1.

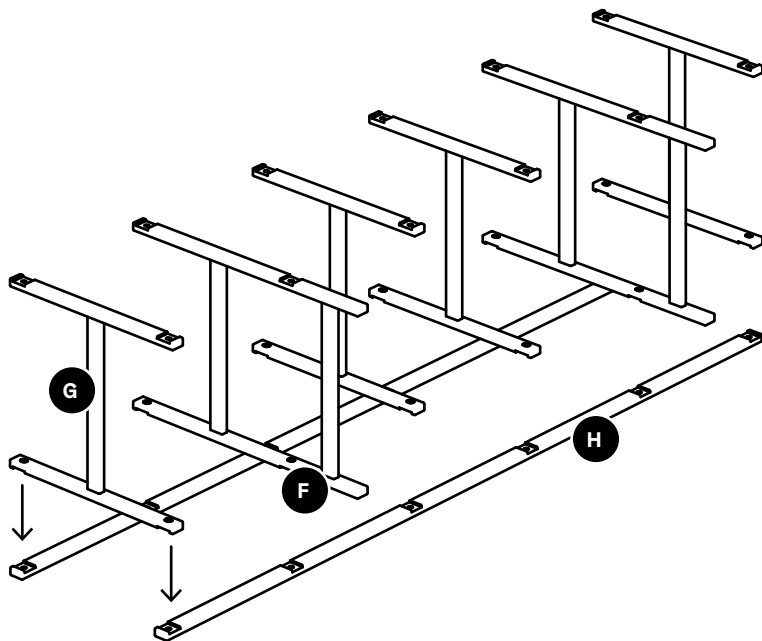


Step 2.

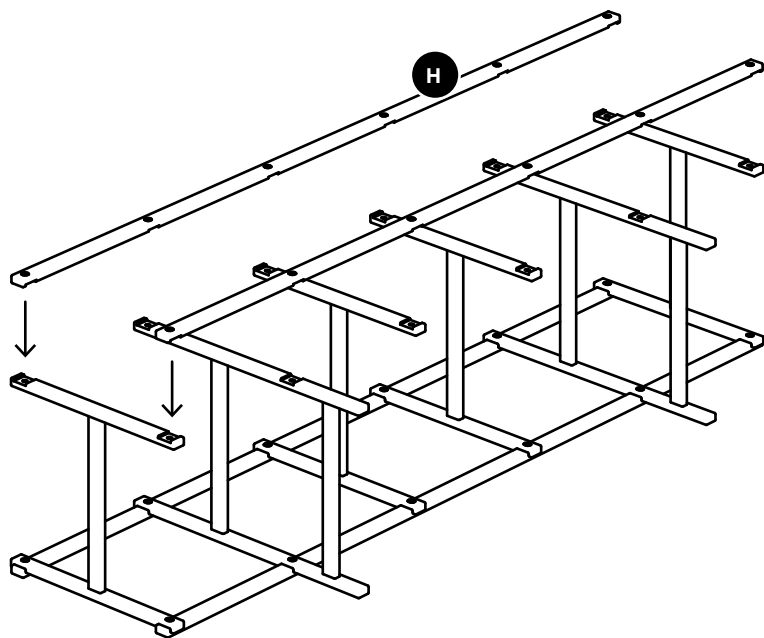

Step 3.

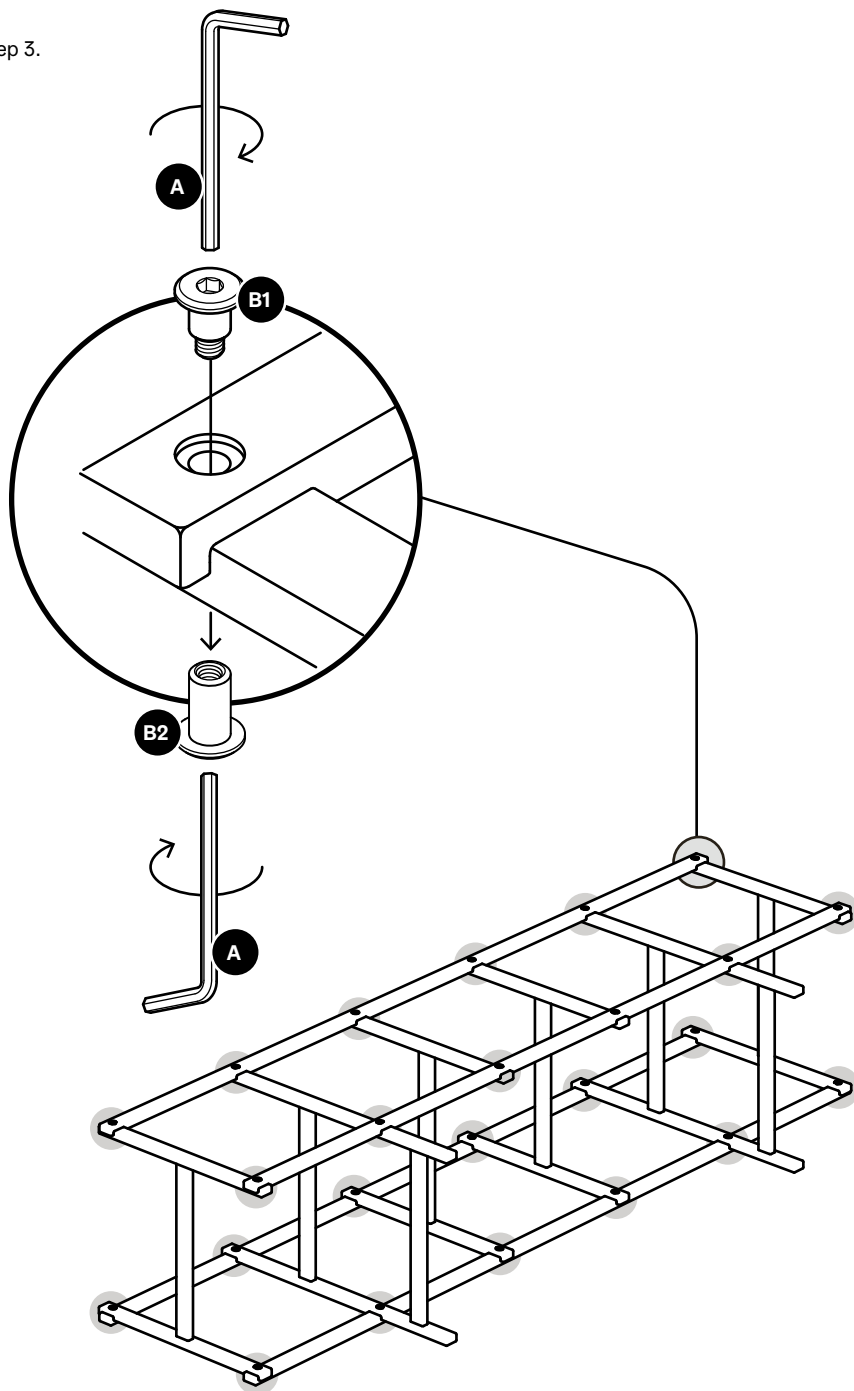

Step 4.

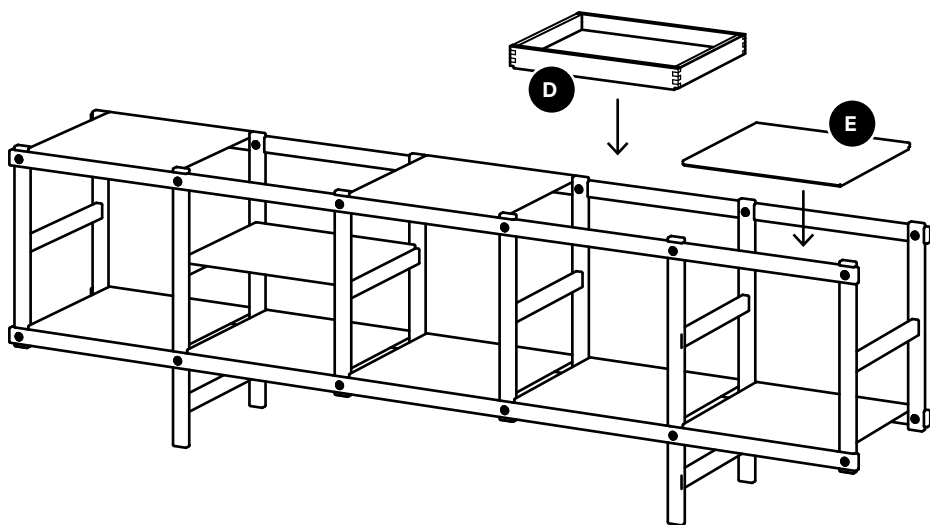

Step 5.

