



Atto 5000

Finishes	Shade	Cable + ceiling cup
	● Natural birch	White
	○ White laminated	White
	● Black laminated	Black
	● Walnut veneer	White
Material	Form pressed birch slats	
Sizes	Height 21 cm	
	Diameter Ø 34 cm	
	Weight 1,9 kg	
	Package 39 × 39 × 30 cm, 3,0 kg	
Light source	LED, 13 W, 2850 K, min. 800 lm, dimmable incl. (Type: Trailing Edge), Also available with 2700 K.	
Cable	180 cm, textile cable, connector (+ a separate ceiling plug in Finland and Sweden) + ceiling cup	
IP Rating	IP20	
Maintenance	Wipe dust regularly. To remove fresh stains wipe with a slightly moist cloth.	



Round ceiling cup of Atto and Aspiro

Height	8,1 cm / 8,9 cm (with ring)
Outer upper Ø	11,2 cm / 11,7 cm (with ring)
Inner upper Ø	11,7 cm / 12,0 cm (with ring)
Weight	58 g / 74 g (with ring)
Colour	White or black matt soft lacquer depending on the colour of the pendant

Information The round ceiling cup includes an additional ring, which enables leading the cable along the ceiling into the ceiling cup. The additional ring can also be used to cover a larger ceiling socket.

Any extra length of the cable can be swirled into the ceiling cup when altering the hanging height of the pendant.

The round ceiling cup is a part of the cable set which includes also the lamp base, a textile cable, a suspension screw and a ceiling plug or terminal block.

The round ceiling cup is used with the models Atto 5000 and Aspiro 8000.

Please check the separate ceiling cup instruction leaflet for more details and installation instructions.

Dezall Installation

Svenska

dezall lamptops
Tight fit guaranteed

Dezall® Lamptops är ett nytt och enkelt sätt att hänga upp lampor. Lamptoppen monteras på befintlig sladd och kräver inte att sladden kapas. Såhär gör du:



Lås fast sladden i den övre delen av skruven, börja med mittenhålet. Lägg sedan in sladden inuti gängen. Tryck ned den ordentligt i botten. Finns en gammal kåpa kan denna tas bort från sladden genom att tex. klippa den i två bitar med en sax.




Trä in skruven, kontakt och överbliven sladd genom kåpan underifrån. Trä även genom ringen om denna ska användas. Ringen kan användas för att få en större kåpa, eller då kontakten till taklampan sitter en bit ifrån där lampen ska hänga. Tryck då ut ett av de förberedda hålen, låt sladden löpa därigenom och placera ringen mot taket ovanpå kåpan.



De två matchande botten delarna läggs nu runt sladden, mot varandra, mellan kåpan och lampen. Tryck ihop dem ordentligt. För in botten i kåpan genom att passa in botten delens "vingar" i spåren inuti kåpan. Tryck in botten tills dess att ytan undertill blir helt plan.




Häng upp skruven på takkroken och sätt i kontakten (alt montera kopplingsplinten). Se först till att takkroken sitter fäst i taket och inte roterar. Häng på kroken, samla ihop den överblivna sladden och vira denna runt den övre delen av skruven/kroken (undvik dock själva gängen). Fäst med bifogad fästtråd.

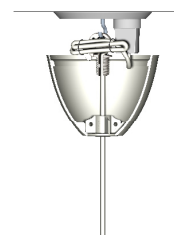

För lamptoppen uppåt mot skruven som hänger på kroken. När skruv och botten delens "mutter" har hittat varandra inne i kåpan kan man börja skruva lamptoppen medsols uppåt. Skruva tills toppen når taket. För att hitta rätt kan du försiktigt dra i sladden nedåt, då kommer skruven automatiskt att vinklas rakt nedåt och därmed lätt hitta in i botten delen.



Lamptoppen sitter nu perfekt mot taket.

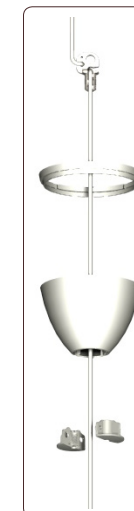

www.dezall.se

Dezall Installation

English

dezall lamptops
Tight fit guaranteed


Dezall® Lamptops is a new and simple way to mount lamps. The lamptop is mounted onto the existing cord and doesn't require the cord to be cut or to make screwholes in the ceiling. This is how it works:




Lock the cord in the upper part of the screw, start in the middle. Then insert it into the opening along the thread. Push it down into the bottom of the channel. If there is an old cover, this can be removed from the cord e.g. by cutting it with scissors.




Insert the screw, plug and remaining cord through the cover from below. Also insert it through the ring if this is to be used. The ring can be used to make the cover bigger, or if the outlet for the ceiling lamp is located at a distance from where the lamp is to be placed. Push out a perforated tab to make room for the cord and place the ring to the ceiling on top of the cover.

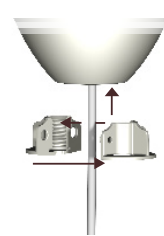


Put the two matching bottom parts together, facing each other, around the cord between the cover and the lamp. Insert the assembled bottom part into the cover by fitting the "wings" into the slots inside the cover. Push it into the cover until fully seated.

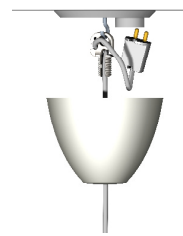

Hang the screw on the ceiling hook and connect the plug. (or terminal block). First ensure that the ceiling hook is fixed to the ceiling and does not rotate. When connected, collect the remaining cord, wind it around the upper part of the screw and hook and tie it up using the enclosed wire-tie (avoid winding it around the thread).

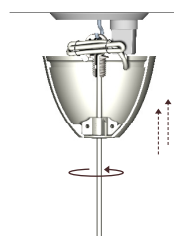

Move the lamptop upwards towards the screw hanging on the hook. When the screw and the bottom parts' "nut" have come in contact inside the cover, start screwing the cover clockwise until it reaches the ceiling. By pulling the cord lightly from below, the screw will automatically be angled downwards and will then easily find the nut.

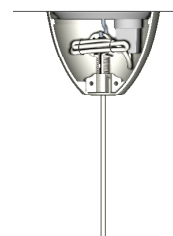

The lamptop is now sitting straight to the ceiling.



www.dezall.se

ATTO

Dimmerlist

5.8.2015

Manufacturer	Dimmer	Note	Minimum LED-Load	Minimum Dim-range (@700mA)	Stability
BERKER	286710	(same as Insta 51190)	2.5 Watt	20%	OK
BERKER	2902	(same as Insta 53128)	2.5 Watt	25%	OK
BUSCH J	6513U-102		7.5 Watt	20%	OK
DIGITALSTROM	GE-KM200		2.5 Watt	10%	OK
DIGITALSTROM	GE-TKM210		2.5 Watt	10%	OK
DIGITALSTROM	GE-SDM200		2.5 Watt	10%	OK
DIGITALSTROM	GE-SDS200		2.5 Watt	10%	OK
ELARI	ATD 315		2.5 Watt	20%	OK
ELARI	ATD 600R		7.5 Watt	20%	OK
ELKO	3670		2.5 Watt	15%	OK
ELKO	420 GLE/I		2.5 Watt	30%	OK
ELTAKO	EUD61NPN-UC		2.5 Watt	50%	OK
ELTAKO	EUD12D-UC		2.5 Watt	50%	OK
ELTAKO	EUD12NPN-UC		2.5 Watt	50%	OK
EPV	PAB 315		2.5 Watt	20%	OK
GIRA	118200	(same as Insta 51190)	2.5 Watt	20%	OK
GIRA	238500	(same as Insta 53036)	1.0 Watt	9.5%	OK
GIRA	030500	(same as Insta 53128)	2.5 Watt	25%	OK
GIRA	117600/I03		3.0 Watt	10%	OK
INSTA	51190		2.5 Watt	20%	OK
INSTA	53036	Minimum level can be programmed.	1.0 Watt	9.5%	OK
INSTA	53128		2.5 Watt	25%	OK
INSTA	FUNK 576650 22		10 Watt	30%	OK
INSTA	51040		2.5 Watt	20%	OK
JUNG	1224 LED UDE	(same as Insta 53036)	1.0 Watt	9.5%	OK
JUNG	1254 UDE	(same as Insta 53128)	2.5 Watt	20%	OK
JUNG	225TDE		2.5 Watt	20%	OK
JUNG	243 EX	(same as Insta 51190)	2.5 Watt	20%	OK
LEGRAND	670 85		1.0 Watt	10%	OK
LUTRON	LPRPM-4A		2.5 Watt	15%	OK
LUTRON	GRAFIK INTEGRAL GXI		2.5 Watt	15%	OK
MERTEN	5771		4.0 Watt	30%	OK
MOELLER/EATON	CDAU-01/03		2.5 Watt	20%	OK
MOELLER	CDAE-01/02		2.5 Watt	30%	OK
MOELLER xcomfort	CDAU-01/03		2.5 Watt	20%	OK
OPUS	852395		2.5 Watt	30%	OK
PEHA	433HAB		2.5 Watt	20%	OK
SCHNEIDER	WED002311		2.5 Watt	20%	OK
SCHNEIDER	SBD315RC		4.0 Watt	10%	OK
SCHNEIDER	ATD 315		2.5 Watt	20%	OK
SCHNEIDER	600R		7.5 Watt	20%	OK
SIEMENS	5 TC8 284		7.5 Watt	15%	OK
TRONIC	INSTA 51161		4.0 Watt	30%	OK
VADSBO	LS220		2.5 Watt	1%	OK
VADSBO	LD220		2.5 Watt	1%	OK
VARILIGHT	V-PRO JQP401W	Minimum level can be programmed.	1.0 Watt	0%	OK

Secto Design Oy: Atto 5000



This luminaire contains built-in LED lamps.

A⁺⁺

A⁺

A

B

C

D

E

} LED

The lamps cannot be changed in the luminaire.